

# PKE User Manual

## 1. Arm Key


In the normal state, press the horn button once to sound the horn once and simultaneously lock the motor. After 3 seconds, enter the arming state.

## 2. Arming Alarm

**A.** In the arming state, upon detecting a vibration signal, the horn sounds for 2 seconds, simultaneously locking the motor. If there is another vibration within 15 seconds, the horn will sound continuously for 15 seconds, and the motor remains locked.

**B.** In the arming state, gently push the vehicle continuously for 2 seconds; the horn sounds for 2 seconds, simultaneously locking the motor. If the vehicle is pushed again within 15 seconds, the horn will sound continuously for 15 seconds, and the motor remains locked.


**C.** In the arming state, opening the mechanical lock allows direct riding of the vehicle.

**D.** After an alarm is triggered by vibration or motion, press the arming key  once to pause the alarm. The anti-theft device remains in the arming state.


## 3. Disarm Key Function


In the arming state, press the key once; the horn sounds twice, the motor unlocks, and the arming state is deactivated.

## 4. Remote Start

While in the arming or disarming state, press the mute key  twice within 2 seconds. The horn sounds a power-on prompt, and the anti-theft device powers the ignition.

## 5. Induction Function (Ineffective when the mechanical key is in use)



**A.** When the remote control is near the vehicle and there is no activity for 3 minutes, the anti-theft device enters the silent arming state. It can be reactivated through rotation, vibration, or remote control disarming , returning to a 3-minute pre-activation state.



**B.** In the unpowered state, with the remote control within 1 to 2 meters of the vehicle, the vehicle powers on automatically. The vehicle can be powered off using the one-key start button or remote disarming  button. Once the remote control is 4 to 8 meters away, the vehicle enters the automatic arming state.

**C.** After the vehicle is powered off, if it needs to be powered on again, it can be done through the

mechanical key, remote start, or by moving away and then approaching the vehicle.

### **6. Enable/Disable Anti-theft Device Induction Function (Perform after keyless start)**

**A.** Within the main machine induction range, simultaneously press and hold the remote control arming  and disarming keys  for 3 seconds. The main machine emits a "beep" prompt, and the red indicator on the remote control flashes once, indicating that the induction function is enabled.

**B.** Simultaneously press and hold the arming  and disarming keys  for 3 seconds again. The main machine emits a "beep beep beep" prompt, and the red indicator on the remote control flashes twice, indicating that the induction function is disabled.



**C.** After the operation, press any key on the remote control twice to confirm whether the induction function is enabled. If you hear "beep beep beep" or "beep beep beep beep" prompts, no further action is needed.

**D.** The induction function is factory-defaulted to the disabled state. Customers need to enable it themselves if they want to use the induction function.





### **7. Power-off Memory**

After the anti-theft device loses power and is re-powered, the arming and induction functions remain in the state they were in before power loss.

### **8. Vibration Sensitivity Setting**

Simultaneously press and hold the arming key  and mute key  for 3 seconds. There are 5 sensitivity levels, with level 1 being the highest. The number of times the anti-theft device beeps indicates the sensitivity level. The default is level 1.

### **9. Remote Control Learning Code Setting**

After keyless start, long-press the remote control mute key  for 5 seconds. The horn sounds a prompt, and within 3 seconds, press the arming key  to enter learning code mode. Press any two buttons on the remote control one after another (ensure that the last two prompt sounds are from pressing your own two remote control buttons). Press the mute key  and disarming key  simultaneously to exit learning code mode and resume normal operation.